


ADJUSTMENT INSTRUCTIONS

To adjust platform height:

Lift front edge of keyboard and position at desired height. The platform will automatically lock into place when released.

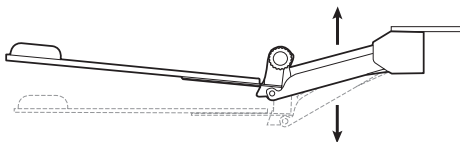

To adjust platform tilt:

Unscrew Angle Adjust Knob until loose. Adjust platform to desired tilt. Tighten Angle Adjust Knob.

