



Bulldog Operating Instructions (also available on line at www.knoll.com)

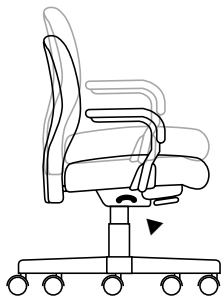


Seat Height Adjustment

For pneumatic seat height chairs, lift the handle on the right to adjust height. If your chair does not have pneumatic seat height, it has mechanical seat height. To raise, rotate the seat counterclockwise and to lower, rotate the seat clockwise.

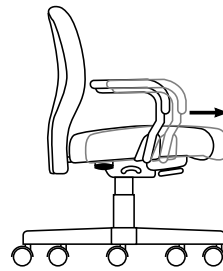


Sliding Seat Depth Adjustment (optional)

Pull the lever located under the right side of the seat cushion to the rear of the arm. Slide the seat to the desired location. Release the lever in one of the six stops within the 2¼" range.

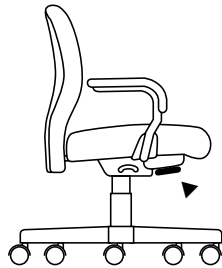

Tension Adjustment


Lean back and recline. Adjust tension if necessary. To adjust tension, reach under the front of the seat to find the knob. Turn left to tighten and right to loosen.

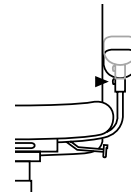

Standard Adjustable Arms (optional):


Armpad Height

Press the green button on the inside of the arm support. While pressing the button, raise or lower the armpad to the desired position and release the button. The armpad height can be adjusted 2½".

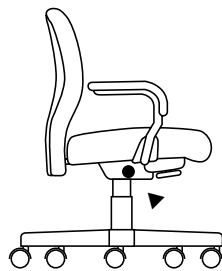

Tilt lock

On the left side of the chair, push the circular knob in to lock and pull out to unlock the tilt.

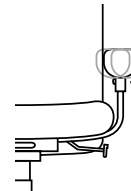


Armpad Width

Remove the two screws under the armpad with a screwdriver. Remount the armpads ½" right or left of center for 1" of adjustability. Reinsert the screws.

Variable Tilt Stop

(on all models with tilt lock)


Using the same control as the tilt lock (see above), recline in the chair and push knob to set. This limits the amount of recline.

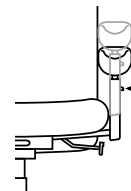

High Performance Arms (optional):

Armpad Height


Lift the lever on the outside of the arm support for 4" of height adjustability.

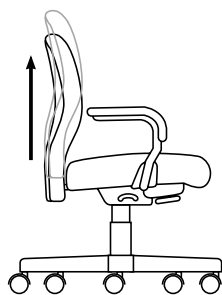

Back Height Adjustment


(2-piece chairs)

Place both hands on the base of the back and lift to raise the back height. The back height adjusts 8 notches upward for a total of 4" of adjustability. The 9th notch brings the back down to the lowest position.

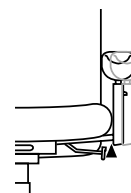


Arm Support Width

Lift the lever located beneath the arm support. Adjust the arm support to the desired width and tighten the lever by pushing it down. The arm supports can be adjusted 1½" on each side for a total of 3" in width adjustment.

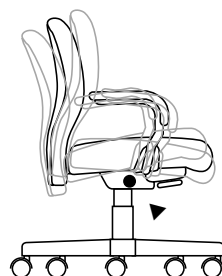


Forward Tilt (optional)

Recline slightly and rotate the lever on the left side of the chair in a forward motion. Recline and rotate the same knob rearward to return to the original position.

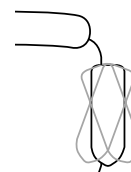

Armpad Rotation

Lift slightly and rotate the arm pads 21° right or left of center for a total of 42° in adjustability.

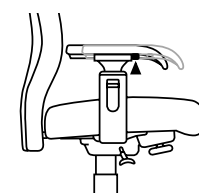

Armpad Slide

Press on the buttons located on either side of the armpad and slide the armpad to the desired position.